

20-count Manual Capsule Filler

Directions for use



CAPSULE SUPPLIES



CAPSULESUPPLIES.com



STEP-1

Separate the capsules and place the bodies in the **Body Sheet**, setting the caps aside.




STEP-2

Align the sheet with the "walls" around it on top of the body sheet. (This piece serves as your powder guard.)




STEP-3

Fill the base with your capsule powder, spreading the powder with a spatula or backside of the **tamper** to fill the powder into capsule bodies.

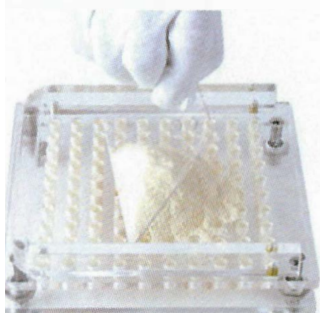

STEP-4

Use the **tamper** to gently press the powder into the capsules. Do not overfill as this will break your capsules. Repeat steps 3 and 4 if needed. Remove the powder guard and sweep away excess powder.

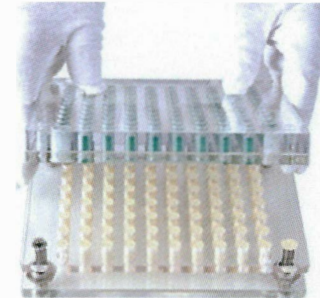

STEP-5

Fill the **Cap sheet** with the capsule tops, making sure the enclosed holes are facing downward.




STEP-6

Cover the **Cap sheet** with the **Middle Sheet**, fitting it into place.



STEP-7

Holding both the **Cap Sheet** and **Middle Sheets** together, flip over and place them on the **Body Sheet**, setting into place.

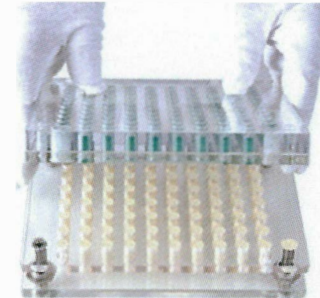

STEP-8

Place both hands on top of all the assembled plates, pushing downwards with even pressure. You may wish to do this several times,



STEP-9

Remove the top two sheets to expose the finished capsules, and gently remove them from the sheet. You may wish to manually "snap" the capsules gently to ensure that they are completely sealed.

